

NOTE: If you received a control module AND throttle, make sure to replace BOTH parts on your unit.

Tools Required: (Not included)

- A. Phillips screwdriver
- B. 5mm open wrench
- C. 8mm open wrench

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before removing or installing the batteries. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Twist the black plastic cap and remove (See insert). Using a 5mm Allen wrench, remove the hex bolt.

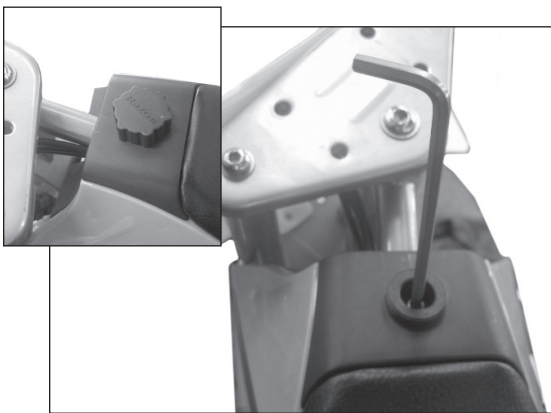


Figure 1

Step 2

Using a 5mm Allen wrench, loosen the two hex bolts underneath the rear of the seat and remove the fairing.



Figure 2

Step 3

On the opposite side of the charger port, locate and remove the 5 Phillips screws and locknuts on the battery cover using a Phillips head screwdriver and 8mm open wrench. Separate and remove cover.

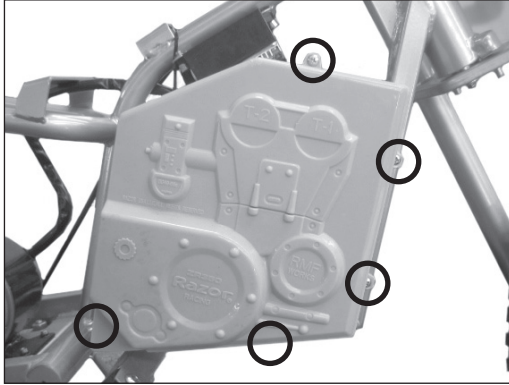


Figure 3

Step 4

Carefully cut the zip tie holding the wires together. Disconnect the five white plastic connectors attached to the control module by depressing the tab (see insert).

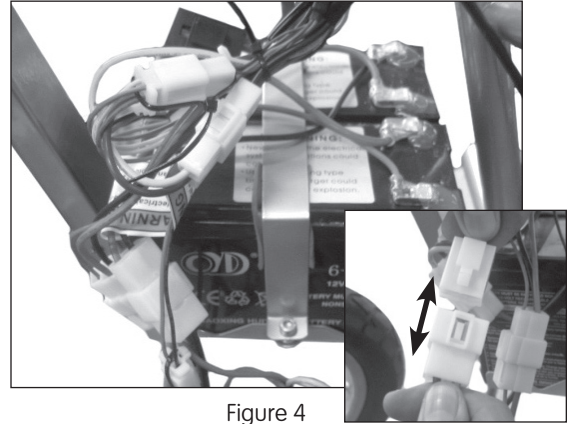


Figure 4

Step 5

Using a Phillips head screwdriver, loosen the two screws holding the control module in place and remove.

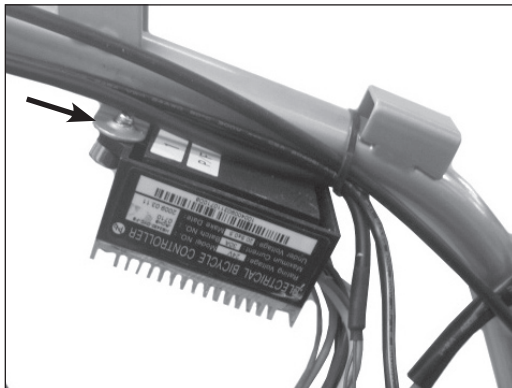


Figure 5

Step 6

Install the new control module using the same two screws previously removed. Reconnect the five white plastic connectors.

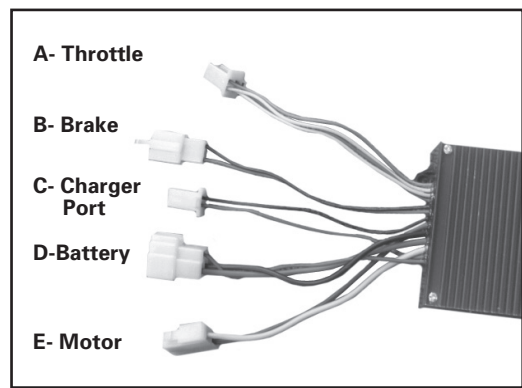


Figure 6

Step 7

Reverse steps:

1. Reattach the battery cover using the same five screws and locknuts previously removed.
2. Reattach fairing and plastic cap.

ATTENTION: Charge unit at least 18 hours before riding.