

TROUBLE SHOOTING

If your SCOOT - N - GO™ sustains an impact:

⚠ WARNING

A CRASH OR OTHER IMPACT CAN PUT EXTRAORDINARY STRESS ON COMPONENTS, CAUSING THEM TO FATIGUE PREMATURELY. COMPONENTS SUFFERING FROM STRESS FATIGUE CAN FAIL SUDDENLY AND CATASTROPHICALLY, CAUSING LOSS OF CONTROL, SERIOUS INJURY OR DEATH.

First, check yourself for injuries, and take care of them as best you can. Seek medical help if necessary. Next, if your SCOOT - N - GO™ is damaged, perform the checks described in this manual. If you are unable to fix any or all damage/problems, or if you find any bent, scored, or discolored parts, please call Electra Customer Service at 1-888-467-1234 M-F 10am - 9pm EST or visit the Electra website at electraUSA.com for replacement parts.

⚠ WARNING

IF YOU HAVE ANY DOUBT ABOUT THE CONDITION OF THE SCOOT - N - GO™ OR ANY OF ITS PARTS, CALL ELECTRA CUSTOMER SERVICE AT 1-888-467-1234 M-F 10AM - 9PM EST AND THEY WILL ASSIST YOU IN PERFORMING A THOROUGH CHECK.

Problem	Possible Cause	Correction
1. Scooter motor does not run	<ol style="list-style-type: none">1. Key ignition is in OFF position2. Fuse has burned out/failed3. Battery is undercharged	<ol style="list-style-type: none">1. Rotate Key to ON position2. Remove, inspect, and replace with additional fuses from tool kit3. Charge the battery for a sufficient amount of time; replace battery
2. Scooter does not accelerate	<ol style="list-style-type: none">1. Battery is undercharged or completely drained2. Electric throttle is not attached or in need of repair3. Drive chain has become unseated	<ol style="list-style-type: none">1. Charge the battery for a sufficient amount of time; replace battery2. Check all throttle connections and wiring; replace throttle if necessary3. Reseat the drive chain on both sprockets and adjust tension
3. The actual driving range is shorter than the estimated range	<ol style="list-style-type: none">1. The tires are under inflated2. The battery is undercharged3. Poor riding conditions4. Weight of rider5. Drive Chain	<ol style="list-style-type: none">1. Inflate to 45-50 PSI2. Charge the battery for a sufficient amount of time; replace battery3. Do not ride in sand, ice, snow, or unstable riding areas4. Mfg, suggest rider not exceed 178 lbs.5. Adjust Drive chain tension

REPLACEMENT PARTS

To order replacement and/or spare parts for your SCOOT - N - GO™, make sure you call the Electra Customer Service / Technical Support Toll-Free Number 1-888-467-1234 M-F 10am - 9pm EST or view the SCOOT - N - GO™ replacement parts available at www.electraUSA.com.